




HOW TO READ A MICROMETER HEAD?

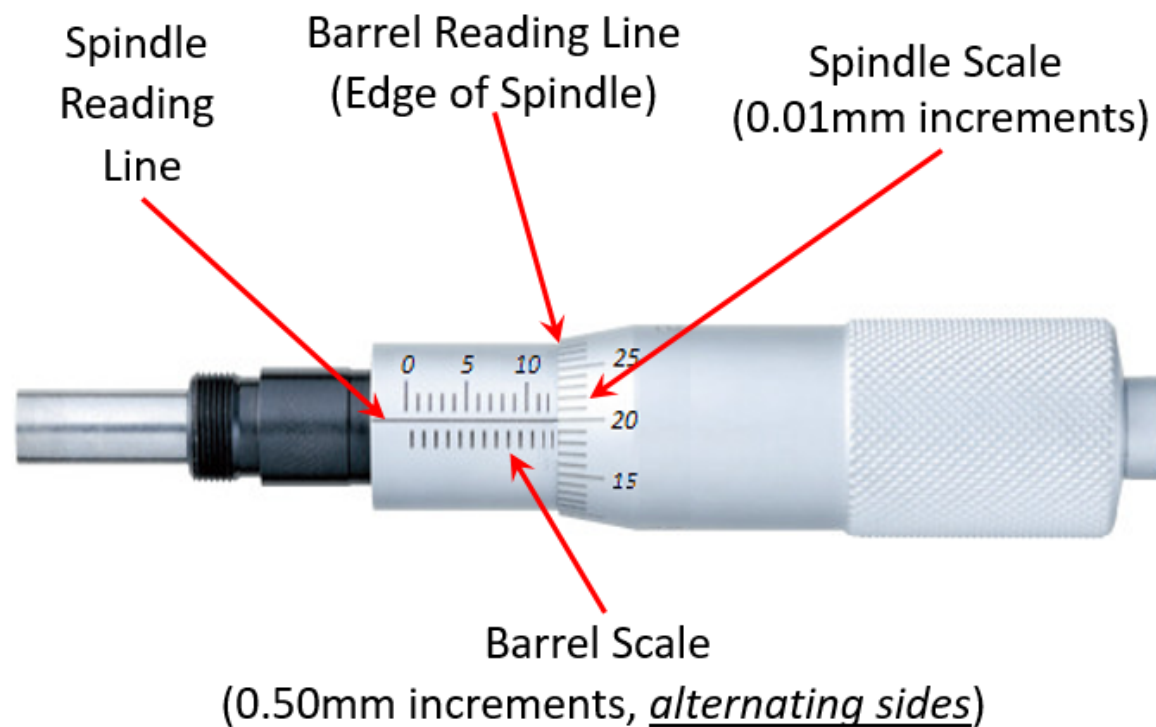

1. Read the **barrel scale** using the **edge of the spindle**.
2. Read **spindle scale** from the **spindle reading line**.
3. Micrometer Head Reading = Barrel Reading + Spindle Reading